

SELECTORES DE COMANDO A LLAVE															
Modelo	∅ 22 A	5000	5100	5200	5300	5400	5500	5600	5700	5800	5900	6000	6100	6200	6300
	∅ 22 RP	RP 200	RP 201	RP204	RP 205	RP 210		RP 230		RP 250					RP 280
	∅ 22 RM	RM 200	RM 201	RM204	RM 205	RM 210		RM 230		RM 250		RM 270			RM 280
Nº de Posiciones		2	2	2	2	3	3	3	3	2	2	3	3	3	3
Posicion de reposo		0-1	0-1	0-1	0-1	2-0-1	2-0-1	2-0-1	2-0-1	0	0	2-0	2-0	0	0
Posicion de retorno automatico		-	-	-	-	-	-	-	-	0-1	0-1	0-1	0-1	2-0-1	2-0-1
Movimiento de contactos															
Llave extarible en posicion		0	0-1	0	0-1	0	0-1	2-0-1	2-0	0	0	0	2-0	0	0

POSICION DE CONTACTOS SEGÚN MOVIMIENTO DE LA LEVA									
Microinterruptores Linea A, RM, RP	Normal								
		2	0	1	0	1	2	0	1
M-100									
NM-200									
NM-300									
M-400 Apertura Retardada									
NM-500 Cierre Anticipado									